

DISNEY
FROZEN II Parent's Guide


Magic Learning Watch



©Disney
91-003738-002

INTRODUCTION

The VTech® Frozen II **Magic Learning Watch** is a great wearable gadget for children! As well as displaying a digital clock, this watch features a handy alarm, timer and stopwatch functions. There are also 4 built-in games to test your memory, counting and comparison skills as you go on an adventure with Anna, Elsa and Olaf!

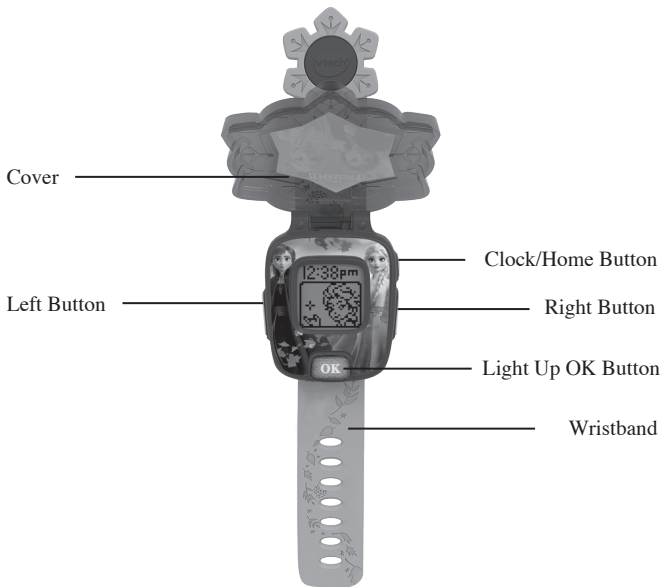

INCLUDED IN THIS PACKAGE

- One VTech® Frozen II Magic Learning Watch
- One Parent's Guide
- One CR2450 battery (placed inside the product)

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE : Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

PRODUCT SPECIFICATION

BATTERY	One CR2450 battery
TIME FORMAT	12h or 24h
DISPLAY	Digital
OPTIMUM OPERATING AND CHARGING TEMPERATURE	32°F - 104°F (0°C - 40°C)

Important Note:

- Do not place the watch under running water.
- Do not submerge. Not suitable for showering, bathing or swimming.
- Keep the cover closed when the watch is not in use.

WARNING:

People with very sensitive skin may notice some irritation after wearing the **VTech® Frozen II Magic Learning Watch** for extended periods of time. The skin may become irritated when moisture, sweat, soap, or other irritants get trapped under the wristband and are left in contact with the skin. To prevent this, we suggest children remove the watch before going to bed for the night, take the watch off if it's feeling uncomfortable, and keep their wrist and the band clean and dry.

In addition, wearing the watch too tightly may also cause irritation. Make sure the fit is good - tight enough so the watch stays in place but not so tight that it's uncomfortable. If you notice any redness, swelling, or other irritation, you may want to consult a doctor before wearing the watch again.

Cover

Open the cover to view the time. When the cover is closed, tap the bottom of the cover to activate fun phrases with a light effect.

Left/Right Buttons

Use the **Left** and **Right Buttons** to select an activity or option, or to change options in time settings or alarm mode.

Light Up OK Button

Press the **Light Up OK Button** to confirm a selection and move to the next option in different activities.

Clock/Home Button

Press the **Clock Button** to return to the clock from any other function or activity.

GETTING STARTED

⚠ WARNING:

This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

⚠ Attention !

Ce jouet contient une pile bouton ! L'ingestion d'une pile bouton peut causer des brûlures internes pouvant provoquer la mort dans un délai de 2 heures. Jeter les piles usées immédiatement après les avoir retirées du jouet. Garder les piles neuves hors d'atteinte des enfants. Si vous remarquez qu'une pile bouton a été avalée, consultez immédiatement un médecin.


POWER SOURCE

The **VTech® Frozen II Magic Learning Watch** operates using a CR2450 battery. The CR2450 battery included with the product is for demo purposes only.

BATTERY INSTALLATION

NOTE: For best performance, remove the factory-installed battery from the **VTech® Frozen II Magic Learning Watch** and use a new battery.

1. Locate the battery cover on the back of the unit and open it with a screwdriver (not included).
2. Remove the battery cover and insert a CR2450 battery as illustrated.
3. Replace the battery cover and fasten the screw.

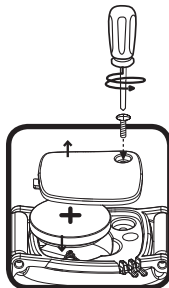

BATTERY NOTICE

- Use one CR2450 Lithium coin battery only for this toy. Do not use rechargeable Lithium ion battery LIR2450. This toy is not compatible with LIR2450.
- The coin battery used with this product should be kept away from small children who might still put things in their mouths. If the coin battery is swallowed, consult a doctor immediately.
- Insert the coin battery with the correct polarity.
- Do not use a damaged coin battery.
- Do not short-circuit the coin battery terminals.
- Remove exhausted coin battery from the product.
- Remove coin battery during long periods of non-use.
- Do not dispose of coin battery in fire.
- Do not charge non-rechargeable coin battery.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

TO BEGIN USING THE VTECH® FROZEN II MAGIC LEARNING WATCH

When you use the watch for the first time, open the cover, then press the **LEFT+RIGHT+OK Buttons** for approximately 5 seconds to unlock the Try Me mode. You will hear three ‘beeping’ sounds when the try me mode is unlocked. You can then press any button to activate the watch and set the time.

Press the **Left** or **Right Button** to select, then press the **OK Button** to confirm and move to the next option. A tick will be displayed when the setting is complete.

Note:

- When the battery level is low, most functions on the watch may not be activated, except for the clock display. It is recommended to change to a new battery as soon as possible before further use.
- If the battery level is too low and cannot keep the clock running, you will need to enter the time again after the battery has been replaced.

AUTOMATIC POWER OFF

To save power, the **VTech® Frozen II Magic Learning Watch** will automatically power off when there has been no input for about 30 seconds. Press any button or open the cover to turn the unit ON again.

Note: The **VTech® Frozen II Magic Learning Watch** will not automatically power off when the Stopwatch is running.

The unit will also automatically turn **OFF** when the battery power is very low. If you see the Low Battery icon appear on screen, please replace the battery.








ACTIVITIES

Clock Display

When the **Clock/Home Button** is pressed, the time will be displayed. Press the **Left** or **Right Button** to display the **Home Menu** where other activities and settings can be selected.

Home Menu

Press the **Left** or **Right Button** to display the **Home Menu**. There are 5 activities to choose from:

1. Alarm Clock 	2. Stopwatch 	3. Timer 
4. Games 	5. Settings 	

- Press the **Left** or **Right Button** to scroll through the menu options.
- Press the **OK Button** to enter the chosen activity.

1. Alarm Clock

You can set an alarm with a choice of 3 alarm tones.

- Press the **Left** or **Right Button** to select the time/ alarm tone.
- Press the **OK Button** to confirm and move to the next setting.
- Press the **Clock Button** to automatically save the current setting.



2. Stopwatch

Access the stopwatch here.

- Press the **OK Button** to start the **Stopwatch**, press again to stop.
- When the stopwatch is stopped, you can press the **Left** or **Right Button** to reset.



3. Timer

Set a countdown timer here.

- Press the **Left** or **Right Button** to change the time.
- Press the **OK Button** to confirm.
- Press the **Clock Button** to automatically save the current setting.
- When you press the **OK Button** to confirm the timer duration, the countdown will start immediately.
- While the timer is running, you can press the **OK Button** to pause/resume. When paused, you can press the **Left** or **Right Button** to reset.



4. Games

In the Games menu, press the **Left** or **Right Button** to scroll through the different progressive leaning game options:

4.1. Olaf Poses

The wind changes Olaf's pose. Remember Olaf's pose then choose the matching one. Press the **OK Button** to choose the answer.




4.2. Troll Count

Boulders roll into town, they are the Trolls! Count the number of Troll boulders. Press the **Left** or **Right Button** to choose the answer.



4.3. Magical Opposites

Elsa's magic has created some opposites. Listen carefully and find the correct answer. Press the **Left** or **Right Button** to choose the answer.

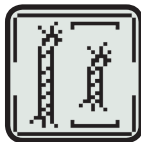

4.4. River Crossing

Select the correct number to help Olaf cross the river. In level 1 and level 2, press the **Left** or **Right Button** to choose the answer. In level 3, press the **Left** or **Right Button** to select, and press the **OK Button** to confirm.



5. Settings

In the **Settings** menu, press the **Left** or **Right Button** to scroll through the various options:

5.1. Clock Face

- Press the **Left** or **Right Button** to select from 9 different clock faces.
- Press the **OK Button** or **Clock Button** to confirm and save the setting.



5.2. Cuckoo Clock

- When the **Cuckoo Clock** is activated, the watch will briefly chime and show the clock at the top of each hour between 7am and 7pm. The **Cuckoo Clock** will not ring if a game is in progress or the Alarm or Timer is ringing.
- Press the **Left** or **Right Button** to turn the **Cuckoo Clock ON** or **OFF**.
- Press the **OK Button** or **Clock Button** to confirm and save the setting.



5.3. Time Setting

- Press the **Left** or **Right Button** to change the options. (am/pm setting is only applicable in 12-hour time format)
- Press the **OK Button** to confirm.
- Press the **Clock Button** to automatically save the current setting.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the battery when the unit is not in use for an extended period of time.

4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the battery.
3. Let the unit stand for a few minutes, then replace the battery.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the unit does not work, replace with a brand new battery.

If the problem still remains, please call our Consumer Services Department on 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection 111000 against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular

installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

CLASS 1
LED PRODUCT



**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.ca



©Disney

TM & © 2019 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003738-002 ©