


vtech[®]

User's Manual

SWITCH & GO DINOS™

BROK THE BRACHIOSAURUS™

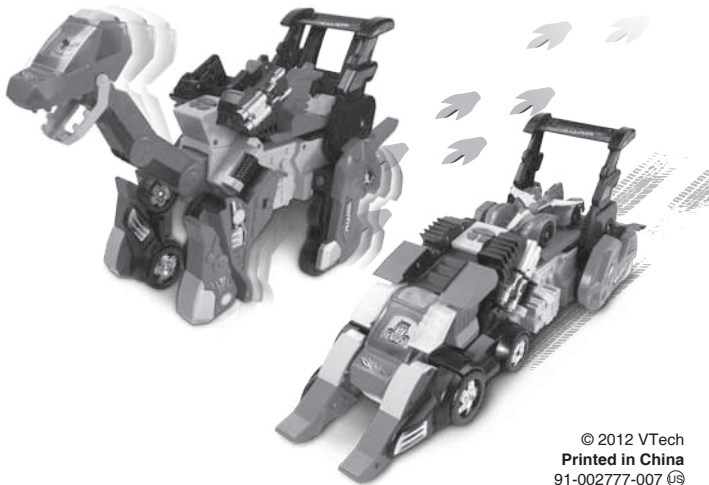

© 2012 VTech
Printed in China
91-002777-007 US



Hi Friend,

You're about to embark on a "dino-mite" adventure with me, **Brok the Brachiosaurus™**! Just so you know, I've been specially created just for you and am part of the **VTech® Switch & Go Dinos™** crew! **Switch & Go Dinos™** are a special breed of dinosaurs that transform from vehicle to dino in a few easy steps. You're going to love playing with me!

Not only can you help me do some wicked transformations, but you can help me do other cool things, too! Customize me by choosing my eyes in dino mode or picking a driver when I'm in vehicle mode! Try pushing me on the ground or pressing a button and you'll hear me make awesome sounds! Press another button to hear me talk, and I'll tell you all about my wild life as a dinosaur! Maybe you'll even learn a thing or two.

For more fun, be sure to check out the rest of the **Switch & Go Dinos™** crew (each sold separately)! And remember, with me you're in for some dino switchin', road racing fun!


Your pal,

Brok the Brachiosaurus™

INTRODUCTION

Howdy! This is **Brok the Brachiosaurus™**. I'm one of the biggest dinosaurs that ever lived so nobody pushes me around! With my long neck and heavy body, you'll see and hear me comin' for miles. That oughta give you plenty of time to get out of my way. Be careful, or these big feet will squash you flatter than a pancake!

When I turn into a truck, I'm a pretty big boy too with lots of extra room for my buddies. Climb aboard! Let's go for a ride!

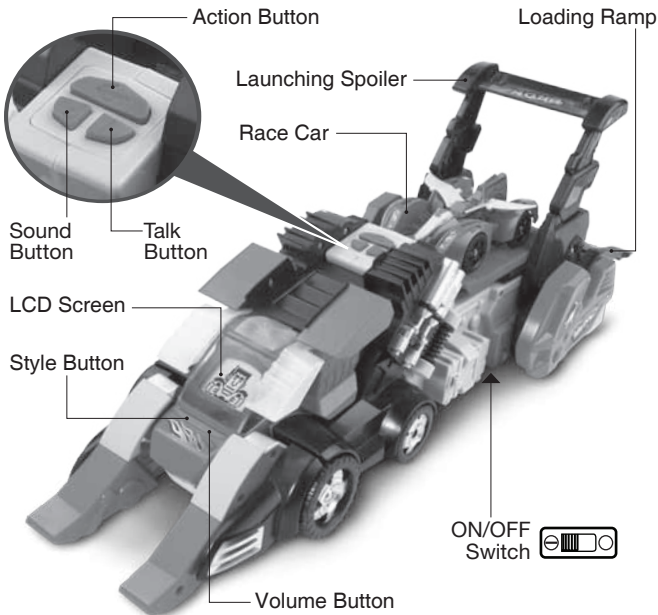

INCLUDED IN THIS PACKAGE

- One VTech® Switch & Dinos™: Brok the Brachiosaurus™
- One user's manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION:



Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE:

Please keep the user's manual as it contains important information.


GETTING STARTED

1. Insert the launching spoiler into the slots on the back of the truck. Make sure that the small holes on each side of the spoiler line up with the white knobs inside the slots, and push the spoiler down until it locks into place.
2. Put on the loading ramp by sliding the white knobs into the small holes at the front of the ramp.

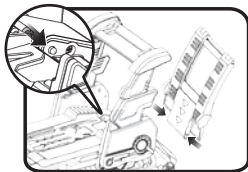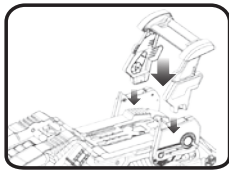

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Install 4 new “AA” (LR6/AM-3) batteries into the main unit following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover.

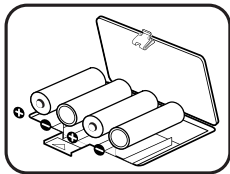

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. TURNING THE UNIT ON

Slide the **ON/OFF Switch** to **ON** to turn the unit **ON**.

2. ACTION BUTTON

Press the **Action Button** to move the neck up and down in Dino mode, or to turn on the lights in Vehicle mode.



3. STYLE BUTTON

Press the **Style Button** to choose a driver or change the dino eyes.



4. TALK BUTTON

Press the **Talk Button** to hear the dino or driver talk.



5. SOUND BUTTON

Press the **Sound Button** to hear cool sound effects.



6. VOLUME BUTTON

Press the **Volume Button** to adjust the volume.



7. RACE CAR & FLYING DINO


Insert the tail of the **Flying Dino** into the **Race Car**. Be careful not to hit the launch triggers on the back of the car while inserting the dino.

Carry the car on the back of the truck, or roll it down the ramp to launch the dino into the air.




8. LOADING RAMP

Move the **Loading Ramp** up or down, and use it to load cars on the truck.

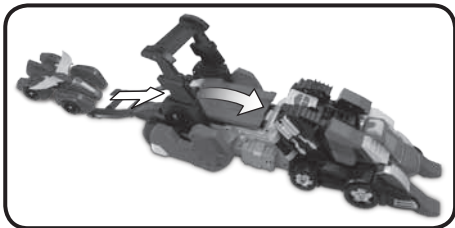

9. LAUNCHING SPOILER

Move the **Launching Spoiler** back to launch cars off the front of the truck.

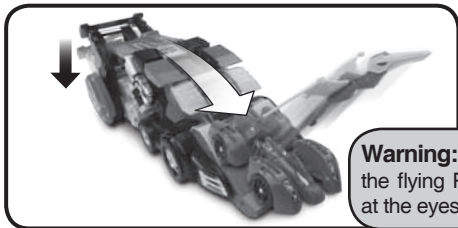


Warning: Do not aim the flying Pterodactyl at the eyes or face.

10. TURNING THE UNIT OFF/ AUTOMATIC SHUT-OFF


Slide the **ON/OFF** switch to **OFF** or hold the **Talk Button / Sound Button** for a few seconds to turn the unit **OFF**.

To preserve battery life, the unit will automatically power-off after several minutes without input.


HOW TO SWITCH THE TRUCK TO A DINO

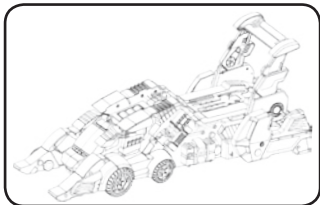


1. Truck shape.

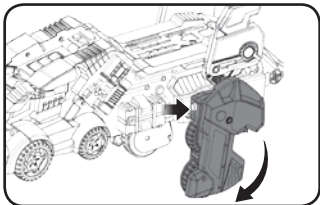


2. Press the blue buttons near the rear wheels to release the back legs, and move the legs down.

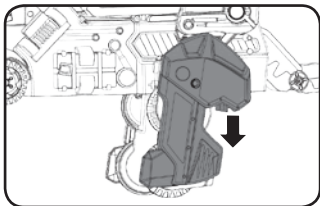


3. Make sure the red cover of the leg can slide up and down freely. If the cover is stuck in the top position, you may need to pull it down gently to free it.

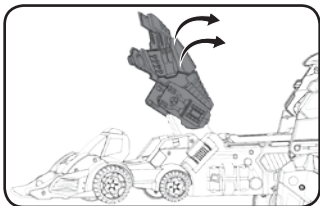


4. Flip the top of the truck back.

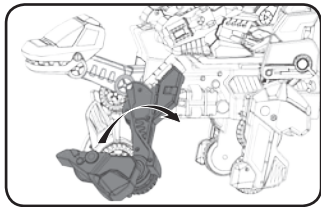


5. Turn the two front wheels back on each side and hook them into place.

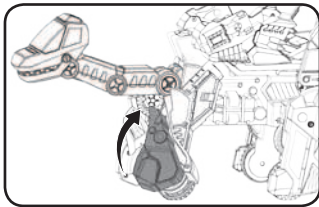


6. Rotate the first half of the front wheels up to form the front legs.

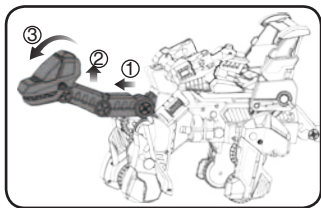

7. Pull the head straight out. Then move the neck up. Move the head down.

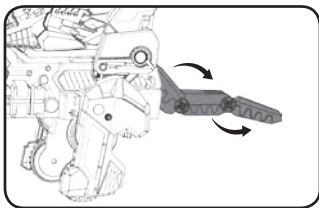


8. Unfold the tail.

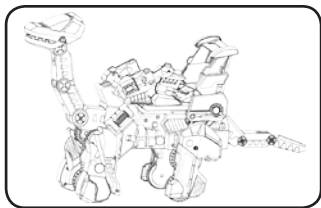


9. Dinosaur shape.


HOW TO SWITCH THE DINO TO A TRUCK

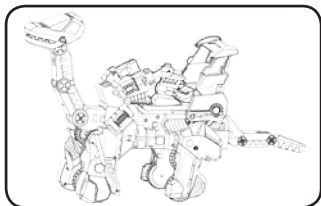


1. Dinosaur shape.

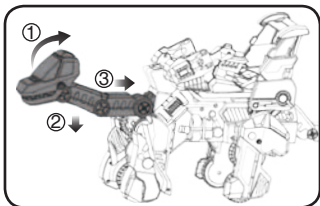


2. Move the head up and move the neck down. Gently push the neck back into the body.

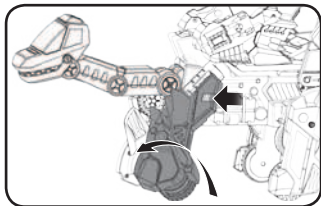


3. Pull the blue switch on the front leg forward to release it. Rotate the leg and bring it next to the head. Repeat on the other side.

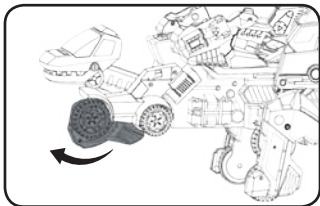


4. Rotate the bottom half of the front legs up to uncover the front wheels.

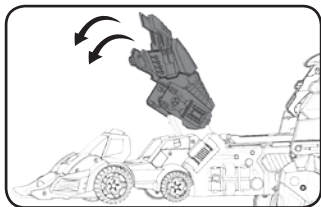


5. Flip the top of the truck down.

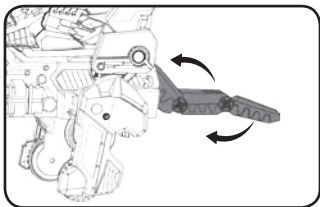


6. Fold the tail in.

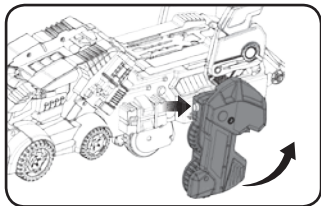

7. Press the blue buttons on the back legs to release them, and move them up.

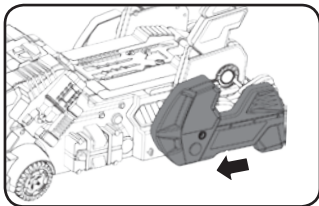

8. Slide the red cover of the leg forward as far as it will go.

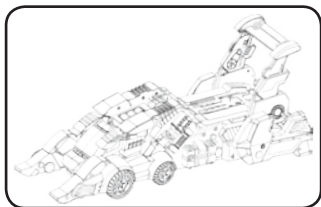

9. Truck shape.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.

3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

NOTE:

FCC information: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

