

Instruction Manual

TRIEERATOPS RAGE CAR



INTRODUCTION

Thank you for purchasing **Switch & Go® Triceratops Race Car**. Transform this ferocious Triceratops into a sleek and cool Race Car in just a few simple steps. 30+ sounds and phrases bring the action to life in your very own dino universe!



INCLUDED IN THE PACKAGE

- Switch & Go® Triceratops Race Car
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

 
Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.

INSTRUCTIONS

Battery Removal and Installation

- 1. Make sure the unit is turned Off.
- Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
- 3. Remove old batteries by pulling up on one end of each battery.
- 4. Install 1 new AA (LR6/AM-3) battery following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged

Ni-MH rechargeable batteries are recommended.)




Note: If there is no response when the unit is switched on, please install brand new batteries and try switching the unit on again.

riangle Warning:

Adult assembly required for battery installation. Keep batteries out of reach of children.

⚠ ATTENTION:

Les piles ou accumulateurs doivent être installés par un adulte. Tenir les piles ou accumulateurs hors de portée des enfants.

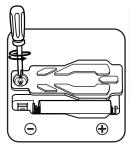

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- · Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT: INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES:

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

Off/Low/High Volume Selector



To turn the unit **On** or to adjust the volume, slide the switch to Low volume () or High volume () . To turn the unit **Off**, slide the switch to **Off** ().



2. Crest Activator

Tilt the **Crest Activator** back to hear fun phrases and race car sounds in Vehicle mode. In Dino mode, tilt the **Crest Activator** to hear fun phrases, dinosaur facts and cool dinosaur sounds. The light projection will show with the response.



 
3. Motion Sensor

Move **Triceratops Race Car** to hear wild dinosaur sounds and phrases in Dino mode. In Vehicle mode, move **Triceratops Race Car** to hear great vehicle sounds.


4. Automatic Shut-Off

To preserve battery life, the **Triceratops Race Car** will automatically shut off after approximately 30 seconds without input. The unit can be turned on again by tilting the **Crest Activator** back, or by switching between Dino and Vehicle modes. The unit will also automatically shut off when battery power is very low.


TRANSFORMATION




Vehicle mode.

 

 
3. Pull the feet down.



 
Rotate the crest 180 degrees. 6. The unit is now in Dino mode.



Pull the legs backward.

 

Pull the front legs down.

 

NOTE

To switch from Dino mode to Vehicle mode, follow the above steps in reverse order.

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Remove the batteries if the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit Off.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit On. The unit should now be ready to use with again.
- 5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S., 1-877-352-8697 in Canada, or by going to our website vtechkids.com and filling out our Contact Us form located under the Customer Support link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

Trade Name: VTech®

Model: 5429

Product Name: Switch & Go® Triceratops Race Car Responsible Party: VTech Electronics North America, L.L.C.

Address: 1156 W. Shure Drive, Suite 200,

Arlington Heights, IL 60004

Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3(B)/NMB-3(B)

Visit our website for more information about our products, downloads, resources and more.

vtechkids.com vtechkids.ca

Read our complete warranty policy online at vtechkids.com/warranty vtechkids.ca/warranty

