

vtech[®]
Baby

Parent's Guide

Snug-a-Bug Musical Critter™

 


91-003756-000 

INTRODUCTION

Thank you for purchasing the **Snug-a-Bug Musical Critter™!**

Enjoy engaging playtime activities and soothing tunes with this cuddly critter. Hear songs, phrases and music by day in Playtime Mode and quiet sounds and lullabies in Sleepytime Mode when it's time to rest.

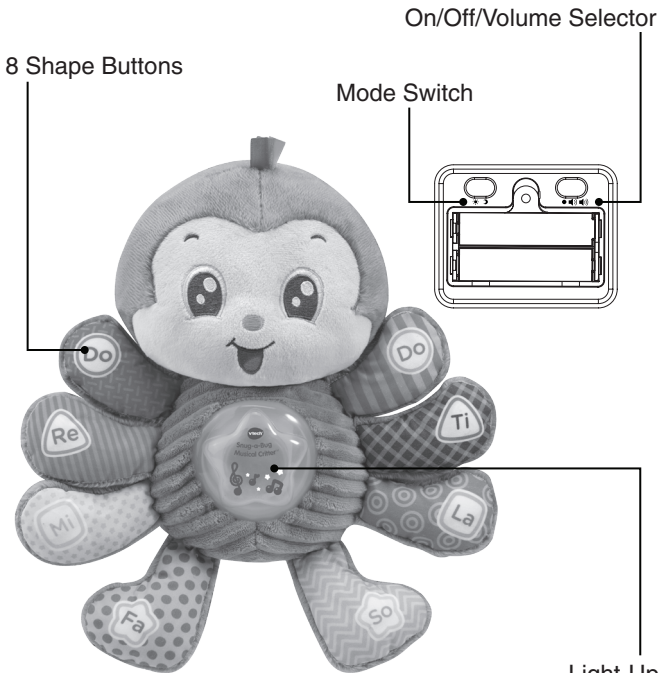

INCLUDED IN THIS PACKAGE

- One **Snug-a-Bug Musical Critter™**
- One parent's guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this parent's guide as it contains important information.

ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

 
NOTE :

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the electronic module. Use a screwdriver to loosen the screw and open the battery cover.
3. Remove the old batteries by pulling up on one side of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

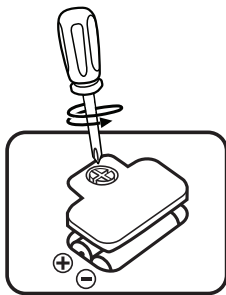




BATTERY NOTICE

- Use new alkaline batteries for maximum performance
- Use only batteries of the same or equivalent type as recommended
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries
- Do not use damaged batteries
- Insert batteries with the correct polarity
- Do not short-circuit the battery terminals
- Remove exhausted batteries from the toy
- Remove batteries during long periods of non-use
- Do not dispose of batteries in fire
- Do not charge non-rechargeable batteries
- Remove rechargeable batteries from the toy before charging (if removable)
- Rechargeable batteries are only to be charged under adult supervision



 
MISE EN GARDE

- Utiliser des piles alcalines neuves pour des performances maximales
 - Seules des piles du type recommandé doivent être utilisées
 - Ne pas mélanger différents types de piles ou d'accumulateurs, ne pas mélanger des piles ou des accumulateurs neufs avec des usagés
 - Ne pas utiliser des piles ou des accumulateurs endommagés
 - Mettre en place les piles ou les accumulateurs en respectant les polarités + et -
 - Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -)
 - Enlever les piles ou les accumulateurs usagés du jouet
 - Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée
 - Ne les jeter ni au feu ni dans la nature
 - Ne pas tenter de recharger des piles non rechargeables
 - Enlever les accumulateurs du jouet pour les recharger
 - Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte
- 

PRODUCT FEATURES


1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/Volume Selector** to the **Low** ())) or **High** ())) volume position. You will hear a playful phrase and a song. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the **Off** (●) position.

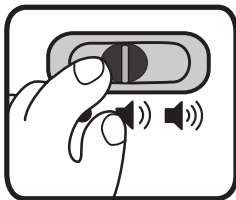

2. Mode Switch

 Slide the **Mode Switch** to **Playtime Mode** (☀) or **Sleepytime Mode** (☾). You will hear different songs, phrases and sounds in each mode. The light flashes in different colors in **Playtime Mode** and it slowly changes colors in **Sleepytime Mode**.

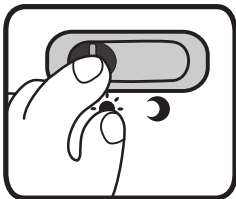

3. Eight Fabric Legs With Eight Shape Buttons

Eight colorful legs include eight musical **Shape Buttons** that teach musical notes, colors and shapes and play eight songs.



4. Automatic Shut Off

To preserve battery life, the **Snug-a-Bug Musical Critter™** will automatically power down after approximately 55 seconds without input. The unit can be turned on again by pressing any button.

Note:

If the unit powers down during play, please install a new set of batteries.

ACTIVITIES

1. Light-Up Tummy Button

Press the **Light-Up Tummy Button** to learn numbers, playful songs and melodies in **Playtime Mode**. Hear soothing songs and lullabies in **Sleepytime Mode**. Press and hold the music button in **Sleepytime Mode** to activate approximately five minutes of lullabies. The light will flash in different colors in **Playtime Mode** and the light will slowly change colors in **Sleepytime Mode**.



2. Shape Buttons

Press the **Shape Buttons** to learn colors, shapes, music notes and short tunes in **Playtime Mode**. When a melody is playing and the shape buttons are pressed, the melody will play note by note. Simply stop pressing the buttons to resume normal play. The light will flash in different colors. In **Sleepytime Mode** you will hear cute sounds and a soothing melody. The light will slowly change colors.





MELODY LIST

1. Cello Suite No.1 in G - Bach
2. Für Elise - Beethoven
3. Piano Sonata in C, K. 545 1st Movement - Mozart
4. Nocturne Op. 9 No. 2 - Chopin
5. The Blue Danube Waltz - Strauss
6. Canon in D - Pachelbel
7. Clair de Lune - Debussy
8. Swan Lake Waltz - Tchaikovsky
9. Looby Loo
10. A-Tisket, A-Tasket
11. Pat-a-Cake
12. Skip to My Lou
13. Polly Put the Kettle On
14. Ta-ra-ra Boom-de-ay
15. The Glow-Worm





SING-ALONG SONG LYRICS

Song 1

I'm a snugly little bug,
I like it when we cuddle up.
Hug me, kiss me, snuggle with me,
I'll be your friend forever.

Song 2

One, two, buckle my shoe,
Three, four, knock at the door,
Five, six, pick up sticks,
Seven, eight, lay them straight,
Nine, ten, a big fat hen.

Song 3

Are you sleeping, are you sleeping?
Little one, little one.
Morning bells are ringing, morning bells are ringing!
Ding ding dong, ding ding dong!





CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. The unit is surface washable. Remove the electronic module before wiping down the unit.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**
2. Interrupt the power supply by removing the batteries
3. Let the unit stand for a few minutes, then replace the batteries
4. Turn the unit back **On**. The unit should now be ready to use again
5. If the unit still does not work, install a new set of batteries

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.





Caution:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- 



Supplier's Declaration of Conformity

Trade Name: VTech®
Model: 5286
Product name: Snug-a-Bug Musical Critter™
Responsible Party: VTech Electronics North America, LLC
Address: 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.
OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,
INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE
OPERATION.

CAN ICES-3 (B)/NMB-3(B)



**CLASS 1
LED PRODUCT**





**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com



TM & © 2019 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003756-000 

