

vtech®

Parent's Guide

 
Touch & Teach Sea Turtle™



91-003800-000 ©

INTRODUCTION

Thank you for purchasing the **Touch & Teach Sea Turtle™**. Go on an underwater adventure and learn numbers, letters, first words and more while exploring eight double-sided pages. Press the eight number buttons to learn about animals, animal sounds, numbers and to hear songs and melodies.

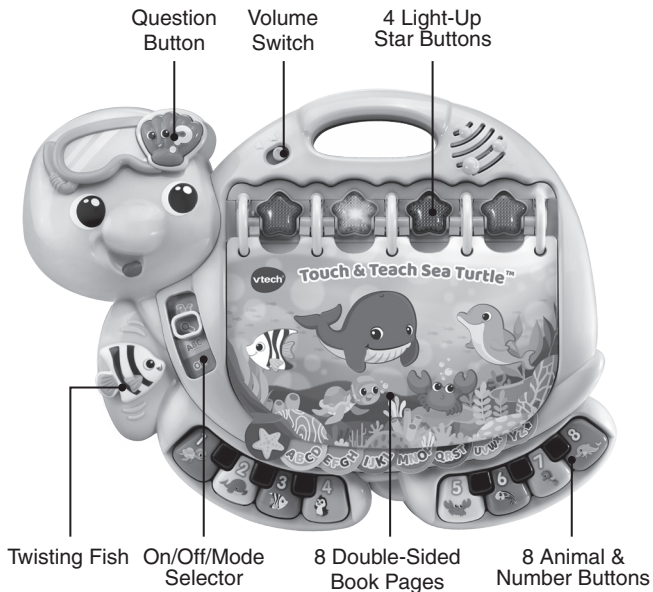

INCLUDED IN THIS PACKAGE

- Touch & Teach Sea Turtle™
- Parent's guide

WARNING

All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please keep this parent's guide as it contains important information.

 
ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

Unlock the Packaging Locks




- ① Rotate the packaging locks counterclockwise 90 degrees.
- ② Pull out the packaging locks.

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the back of the unit. Use a coin or a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one side of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

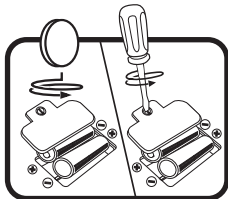

BATTERY NOTICE



- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity (+ and -).
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

MISE EN GARDE

- Utiliser des piles alcalines neuves pour des performances maximales.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mélanger différents types de piles ou d'accumulateurs, ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas utiliser des piles ou des accumulateurs endommagés.
- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Enlever les piles ou les accumulateurs usagés du jouet.
- Retirer les piles ou les accumulateurs en cas de nonutilisation prolongée.
- Ne les jeter ni au feu ni dans la nature.
- Ne pas tenter de recharger des piles non rechargeables.
- Enlever les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.



PRODUCT FEATURES

1. On/Off/Mode Selector

To turn the unit **On**, slide the **On/Off/Mode Selector** to Letter mode **ABC**, Explore mode  or Music mode  position. You will hear a fun opening response in each mode. To turn the unit **Off**, slide the **On/Off/Mode Selector** to the **Off** position.



2. Volume Switch

Slide the **Volume Switch** to the Low volume  or High volume  position to adjust the sound level.

3. Automatic Shut Off

To preserve battery life, the **Touch & Teach Sea Turtle™** will automatically power down after approximately 45 seconds without input. The unit can be turned on again by pressing any button.



 
NOTE:

If the unit repeatedly powers down while playing or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Light-Up Star Buttons

Press the **Light-Up Star** buttons to learn about letters, animal names and sounds, objects and more in Letter mode. Hear interesting facts with fun sounds and short tunes in Explore mode. Listen to a variety of short tunes and melodies in Music mode. The lights will flash with the sounds.

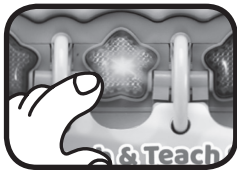

2. Animal and Number Buttons

Press the **Animal and Number** buttons to learn about numbers and counting 1–8 in Letter mode. In Explore mode, learn about animal names and hear



sound effects. Play piano notes in Music mode. While a melody is playing, press the piano keys again to play the melody one note at a time. The lights will flash with the sounds.

 
3. Book Pages

Turn the **Book Pages** to hear magical sounds and short tunes. The lights will flash with the sounds.



4. Question Button

Press the **Question** button to hear a variety of questions about numbers, letters, animals and objects, depending on the selected mode and page. Press the **Animal** and **Number** buttons or the **Light-Up Star** buttons to answer the questions. The lights will flash with the sounds.

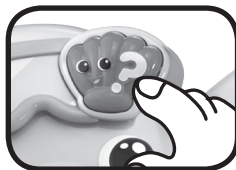

5. Twisting Fish

Turn the **Twisting Fish** to hear a mechanical clicking sound.





MELODIES

1. Turkey in the Straw
2. My Bonnie Lies Over the Ocean
3. Hot Cross Buns
4. Ding Dong Bell
5. MacNamara's Band
6. A-Tisket, A-Tasket
7. Cockles and Mussels
8. Oranges and Lemons
9. Shenandoah
10. Arkansas Traveler
11. Lazy Mary, Will You Get Up?
12. Home Sweet Home
13. Animal Fair
14. There Is a Tavern in the Town
15. Do You Know the Muffin Man?
16. Jack Be Nimble
17. Sing a Song of Sixpence
18. Skip to My Lou
19. Sailing, Sailing
20. Ta-Ra-Ra Boom-De-Ay



SONG LYRICS

I'm a little sea turtle,
See me crawl, see me swim.
I live in the deep blue sea with all my friends.







CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to water or moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
 2. Interrupt the power supply by removing the batteries.
 3. Let the unit stand for a few minutes, then replace the batteries.
 4. Turn the unit back **On**. The unit should now be ready to use again.
 5. If the unit still does not work, install a new set of batteries.
- 
- 

IMPORTANT NOTE:


If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.




CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.





 
Supplier's Declaration of Conformity

Trade Name: VTech®
Model: 5334
Product name: Touch & Teach Sea Turtle™
Responsible Party: VTech Electronics North America, LLC
Address: 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3 (B)/NMB-3(B)



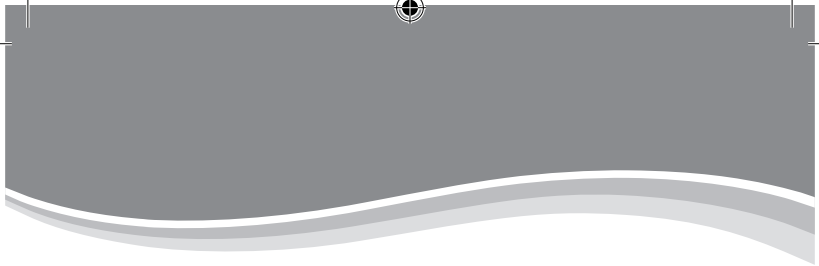

Visit our website for more information about our products, downloads, resources and more.

vtechkids.com

Read our complete warranty policy online at
vtechkids.com/warranty



TM & © 2020 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003800-000