

nickelodeon



Parents' Guide

# Mighty Pups Touch & Teach Word Book™




91-003844-000 US

# INTRODUCTION

Thank you for purchasing the **PAW Patrol Mighty Pups Touch & Teach Word Book**.

Features ten illustrated, touch-activated pages and four fun-packed learning modes. Go on an adventure with Ryder and Chase while exploring new words, phonics, and music.

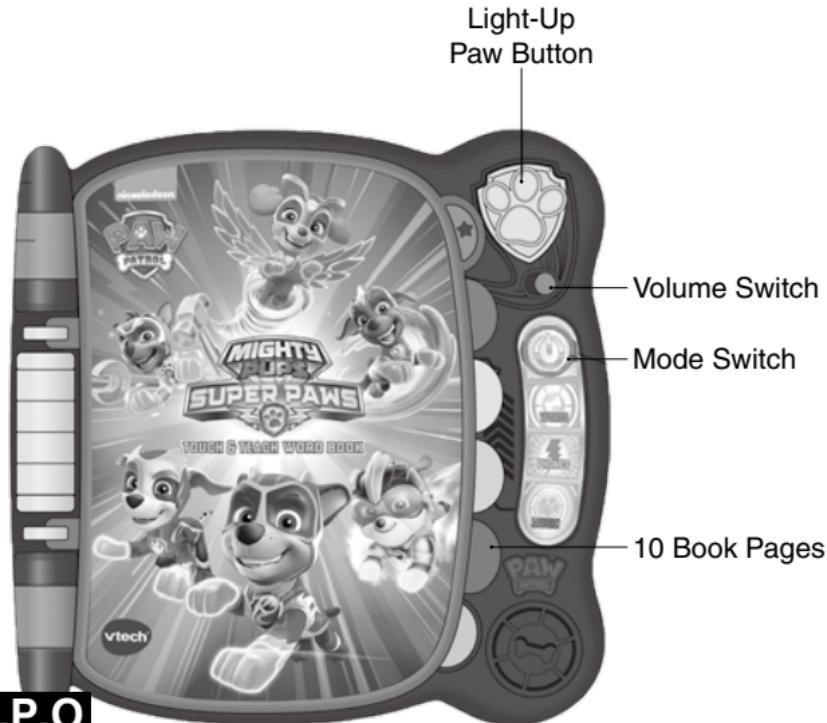

# **INCLUDED IN THIS PACKAGE**

- PAW Patrol Mighty Pups Touch & Teach Word Book
- One parents' guide


**WARNING:** All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

**NOTE:** Please keep this parent's guide as it contains important information.

**ATTENTION :** Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

**NOTE :** Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

## **Unlock the packaging locks:**

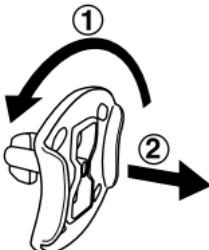


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

# GETTING STARTED

## Battery Removal and Installation

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit, use a screwdriver to loosen the screw and open the battery box.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.

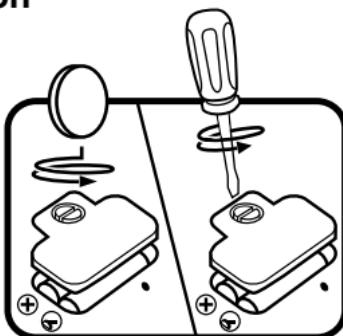

### Note:

If there is no response when the unit is switched on, please insert new batteries and try switching it on again.

## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## MISE EN GARDE

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mélanger différents types de piles ou d'accumulateurs, ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas utiliser des piles ou des accumulateurs endommagés.
- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Enlever les piles ou les accumulateurs usagés du jouet.
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Ne les jeter ni au feu ni dans la nature.
- Ne pas tenter de recharger des piles non rechargeables.
- Enlever les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.

# PRODUCT FEATURES

## 1. Mode Switch

Slide the **Mode Switch** up or down to turn the unit **ON** and select a mode. To turn the unit **OFF**, slide the **Mode Switch** over the On/Off icon.



## 2. Light-Up Paw Button

Press the **Light-Up Paw Button** to activate a fun quiz game or hear character sound effects.



## 3. 10 Book Pages

Open to any of the **Book Pages** and touch the left side of the book to hear Chase and Ryder read a story to you. Touch a word on the right side of the book to learn more.



## 4. VOLUME SWITCH

Slide the **Volume Switch** to adjust to low or high volume.



## 5. AUTOMATIC SHUT-OFF


To preserve battery life, the **PAW Patrol Mighty Pups Touch & Teach Word Book** will automatically turn off after one minute without input. The unit can be turned on again by moving the **Mode Selector** or by pressing the **Light-Up Paw Button**.

**Note:** If the unit repeatedly powers down or the light flashes then fades out, we suggest changing the batteries.

# ACTIVITIES


## 1. Word Explorer Mode

Touch the left side of the book to listen to Chase or Ryder read you a story or touch the right side of the book to learn new vocabulary and word facts.

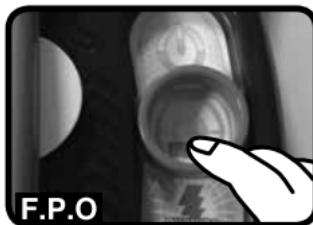

## 2. Phonics Fun Mode

Touch the left side of the book to activate storytelling mode, just like in Word Explorer mode. Touch the right side of the book to learn how to sound out new words.

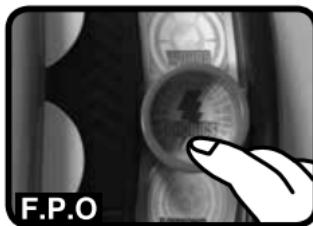

### 3. Music Mode

Listen to music and add your own sound effects! Open to any page and touch the left side of the book to hear a melody, then touch any word on the right side of the book to add fun sound effects on top of the melody. Press the **Light-Up Paw Button** in this mode to hear more fun character sound effects.



### 4. Challenge Mode

When in Word Explorer or Phonics Fun mode, press the **Light-Up Paw Button** at the top of the unit to activate a fun quiz. Answer the questions by touching a word on the right side of the book.



# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

# TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
  2. Interrupt the power supply by removing the batteries.
  3. Let the unit stand for a few minutes, then replace the batteries.
  4. Turn the unit back **ON**. The unit will now be ready to play again.
  5. If the unit still does not work, replace with an entire set of new batteries.
- If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at [vtechkids.com](http://vtechkids.com) and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

## **IMPORTANT NOTE:**

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at [vtechkids.com](http://vtechkids.com) and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **Supplier's Declaration of Conformity**

Trade Name: VTech®

Model: 5307

Product Name: Mighty Pups Touch & Teach Word Book

Responsible Party: VTech Electronics North America, LLC

Address: 1156 W. Shure Drive, Suite 200, Arlington  
Heights, IL 60004

Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

© Spin Master Ltd.™ PAW PATROL and all related titles, logos and characters; and SPIN MASTER logo are trademarks of Spin Master Ltd. Used under license. Nickelodeon and all related titles and logos are trademarks of Viacom International Inc.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***

Read our complete warranty policy online at  
*vtechkids.com/warranty*



TM & © 2020 VTech Holdings Limited.  
All rights reserved.  
Printed in China.  
91-003844-000