


vtech[®]

Instruction Manual

Marble Rush[®] Shuttle Blast-Off Set[™]

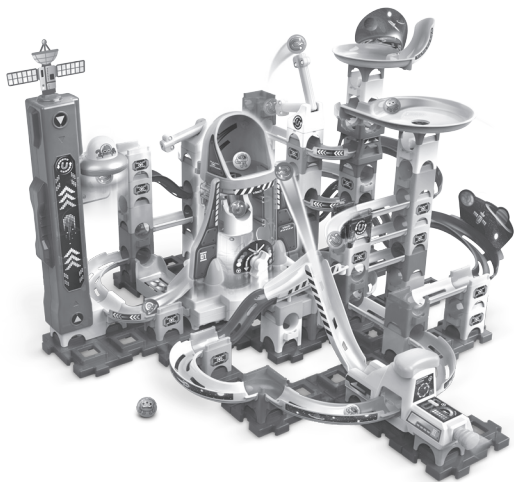


INTRODUCTION

Thank you for purchasing the Marble Rush® Shuttle Blast-Off Set™.

Get ready for a rush of non-stop action! Build thrilling courses, send the marbles into motion and compete with family and friends through exciting challenges complete with lights and sounds. Please refer to the Color Manual for detailed building steps.

The Rocket

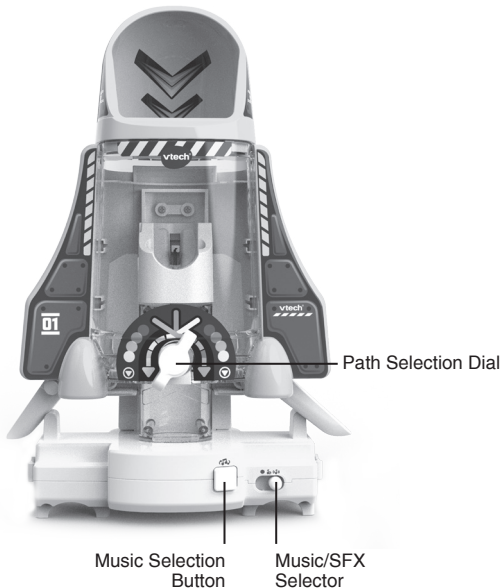

INCLUDED IN THE PACKAGE

- **Marble Rush® Shuttle Blast-Off Set™**
- 120 building pieces
- 5 MagiStunt Marbles (metal core)
- 5 marbles
- Sticker sheet
- Color manual
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'instructions rapide car il comporte des informations importantes.

WARNING:

Choking Hazard -Toy contains small parts and small balls.
Not for children under 3yrs.

ATTENTION :

Ne convient pas aux enfants de moins de 36 mois.
Petits éléments et petites balles. Danger d'étouffement.

WARNING

Do not aim at eyes or face.

WARNING

Do not discharge any object other than the projectile provided with this toy.

ATTENTION

Ne viser ni les yeux ni le visage.


ATTENTION

Ne pas utiliser d'autres projectiles que ceux fournis avec ce jouet.

INSTRUCTIONS

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

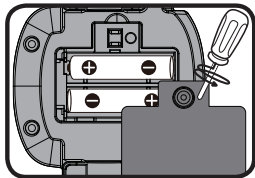

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.





RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

LABEL APPLICATION

Please securely stick the labels to the playset as indicated below:



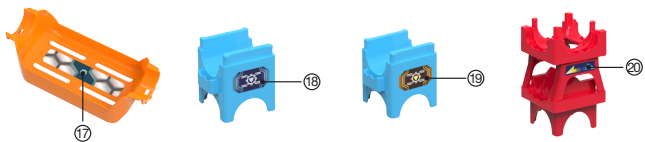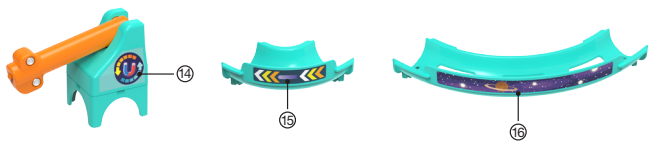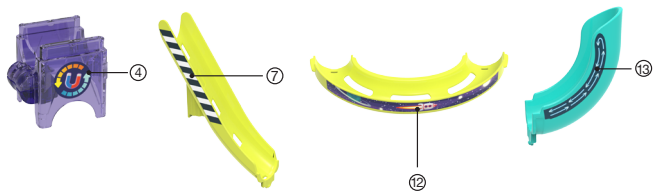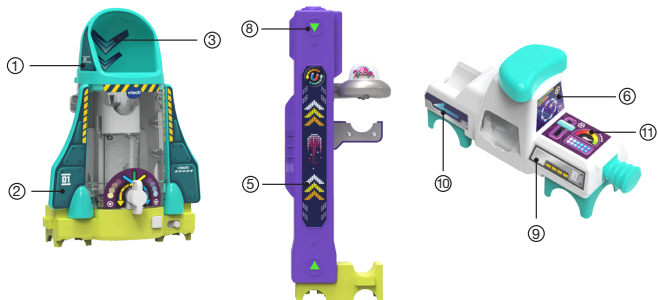

PRODUCT FEATURES

1. Music/SFX Selector ● 🎵 (🎵)

Slide the selector all the way to the right ((🎵)) to turn on both music and sound effects (SFX). The middle position 🎵 plays SFX with no background music. Slide the selector all the way to the left ● to turn off the **Rocket**.




2. Music Selection Button 🎵

Press the **Music Selection Button** to cycle through the background music options.



3. Rocket and Shuttle Launch

When a regular marble goes into the **Rocket**, the **Rocket** will light up and play sound effects. When a **MagiStunt Marble** goes in, the **Rocket** will snap up with launching sound effects and lights. Press the **Rocket** back down to launch again.

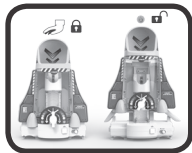

4. Path Selection Dial 🎵

Rotate the dial in the middle of the rocket to left or to right to change the direction the marbles are directed. Choose the middle selection to have marbles sort randomly.



5. Automatic Shut-Off

To preserve battery life, the **Marble Rush® Shuttle Blast-Off Set™** will automatically power-down after several minutes without input. The unit can be turned on again by sliding the **Music/SFX Selector** to the middle or right-most position. The unit will automatically turn off when the batteries are very low.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5598
Product Name: Marble Rush® Shuttle Blast-Off Set™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca


Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty



vtech[®]

Manuel d'utilisation


Marble Rush^{®/MD}
Shuttle Blast-Off Set^{TM/MC}

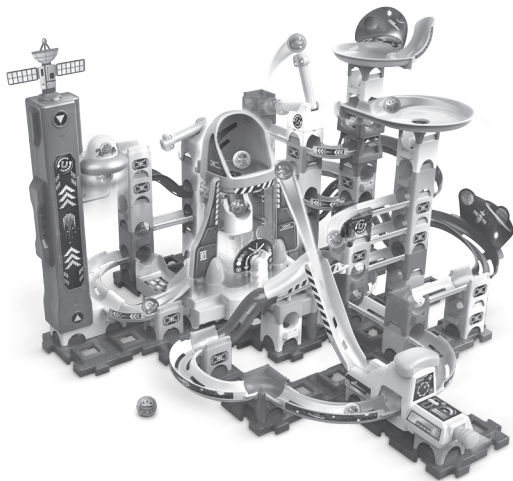

INTRODUCTION

C'est parti pour de nouveaux défis avec le **Shuttle Blast-Off Set™/MC** de **VTech®/MD** ! Assemblez le parcours et c'est parti pour des courses à l'infini ! Les nouvelles billes MagiStunt permettent de relever de nouveaux défis et de faire décoller la navette spatiale. Gardez-les en mouvement en utilisant l'ascenseur OVNI, les demi-tours magiques et les balanciers magnétiques. Qui remportera la victoire ?

Navette spatiale

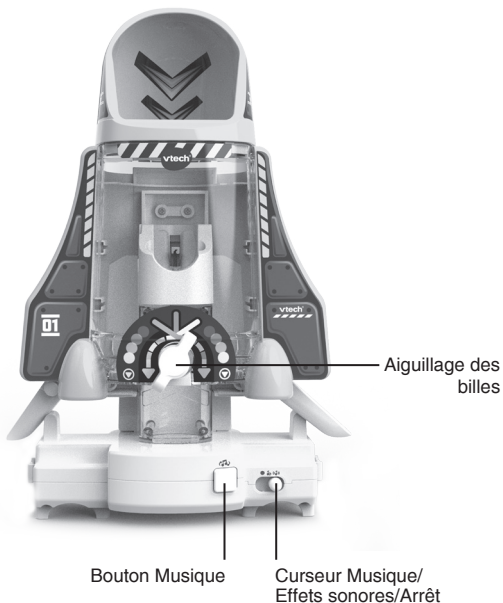

CONTENU DE LA BOÎTE

- Le **Shuttle Blast-Off Set**^{TM/MC} de **VTech**^{®/MD}
- 120 pièces de construction
- 5 billes MagiStunt (métalliques)
- 5 billes
- Un guide de démarrage rapide
- Un guide de construction en couleurs
- Une planche d'autocollants

ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet. Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please save this user's manual as it contains important information.

ATTENTION :

Ne convient pas aux enfants de moins de 36 mois.
Petits éléments et petites balles. Danger d'étouffement.

WARNING:

Choking Hazard -Toy contains small parts and small balls.
Not for children under 3yrs.

ATTENTION : ne viser ni les yeux ni le visage.

ATTENTION : ne pas utiliser d'autres projectiles que ceux fournis avec ce jouet.


WARNING : Do not aim at eyes or face.

WARNING : Do not discharge any object other than the projectile provided with this toy.

ALIMENTATION

Installation des piles

1. Avant d'insérer les piles, s'assurer que le jouet est éteint.
2. Ouvrir le compartiment à piles situé au dos de la partie électronique à l'aide d'un tournevis.
3. Si des piles usagées sont présentes dans le jouet, retirer ces piles en tirant sur l'une des extrémités.
4. Insérer 2 piles AA (AM-3/LR6) en respectant le schéma qui se trouve dans le compartiment à piles. Pour de meilleures performances, il est recommandé d'utiliser des piles alcalines ou des piles rechargeables Ni-MH pleinement rechargées.
5. Refermer soigneusement le couvercle du compartiment et s'assurer que la vis est bien serrée.

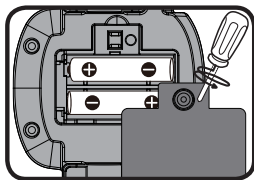

ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.





PILES RECHARGEABLES :

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

APPLICATION DES AUTOCOLLANTS

Coller soigneusement les autocollants sur le circuit comme indiqué ci-dessous :



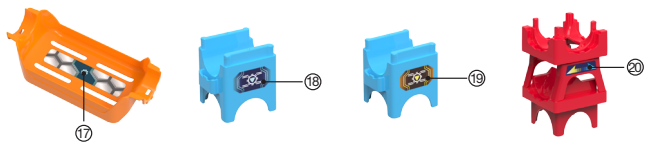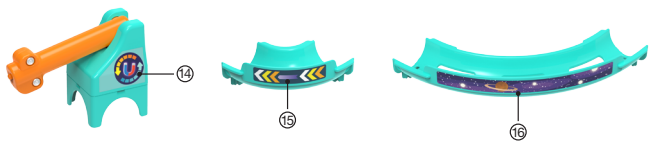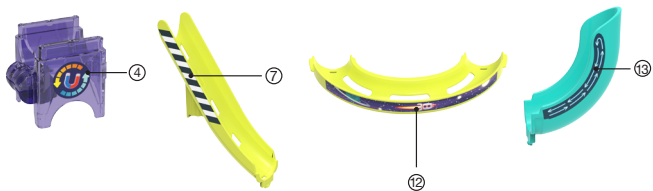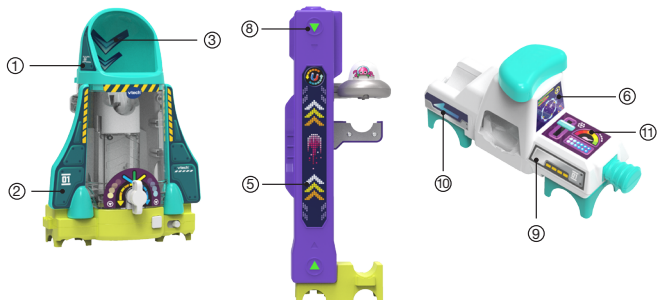

FONCTIONNALITÉS

1. Curseur Musique/Effets sonores/ Arrêt ● 🎵 (🎵)

Déplacer le curseur sur la position (🎵) pour lancer la musique et les effets sonores. Déplacer le curseur sur la position 🎵 pour n'entendre que les effets sonores. Pour éteindre le jouet, déplacer le curseur sur la position ●.



2. Bouton Musique 🎵

Appuyer sur ce bouton pour changer la musique.



3. Base de lancement et navette spatiale

Lorsqu'une **bille** entre dans la navette spatiale, celle-ci déclenche des effets sonores et lumineux. Lorsqu'une **bille MagiStunt** est propulsée dans la navette, celle-ci s'écarte de la base de lancement avec des effets sonores et lumineux. Pour réinitialiser la **navette spatiale**, appuyer dessus pour qu'elle se reconnecte à la **base de lancement**.



4. Aiguillage des billes

Déplacer l'**aiguillage** placé au centre de la navette spatiale vers la gauche ou vers la droite pour choisir la direction dans laquelle les **billes** seront envoyées. Régler la position de l'**aiguillage** sur le milieu pour que les **billes** soient orientées au hasard.



5. Arrêt automatique

Pour préserver la durée de vie des piles, le **Shuttle Blast-Off Set™/MC** s'éteint automatiquement après quelques minutes de non-utilisation. Pour rallumer le jouet, déplacer le **curseur Musique/ Effets sonores/Arrêt** sur la position **Musique** ou **Effets sonores**. Le jouet s'éteindra également automatiquement si les piles sont usagées.

ENTRETIEN

1. Pour nettoyer le jouet, utiliser un linge légèrement humide. Ne pas utiliser de solvants ni de produits corrosifs.
2. Éviter toute exposition prolongée du jouet au soleil et à toute autre source de chaleur.
3. Retirer les piles lorsque le jouet n'est pas utilisé pendant une longue période.
4. Ce jouet est fabriqué avec des matériaux résistants. Néanmoins, lui éviter les chocs contre des surfaces dures et ne pas l'exposer à la moisissure et à l'eau.

EN CAS DE PROBLÈME

Si le jouet ne fonctionne plus ou semble dysfonctionner, suivre ces étapes :

1. Éteindre le jouet.
2. Retirer les piles.
3. Attendre quelques minutes avant de remettre les piles.
4. Allumer le jouet. Il sera normalement prêt à redémarrer.
5. Si le jouet ne fonctionne toujours pas, remplacer toutes les piles par des piles neuves.

Si le problème persiste, merci de contacter le service consommateurs.

Besoin d'aide sur nos produits ?

Pour la France, la Belgique et la Suisse francophones :

www.vtech-jouets.com, rubrique Assistance.

Pour le Canada : www.vtechkids.ca/fr, rubrique Soutien.

Vous souhaitez consulter notre politique de garantie ?

Pour la France, la Belgique et la Suisse francophones :

www.vtech-jouets.com, rubrique Garantie.

Pour le Canada : www.vtechkids.ca/fr, rubrique Politiques.

***Venez découvrir tous nos produits
sur notre site Internet :***

Pour la France : www.vtech-jouets.com

Pour le Canada : www.vtechkids.ca/fr

